




DLV-R Gimbal Downlight

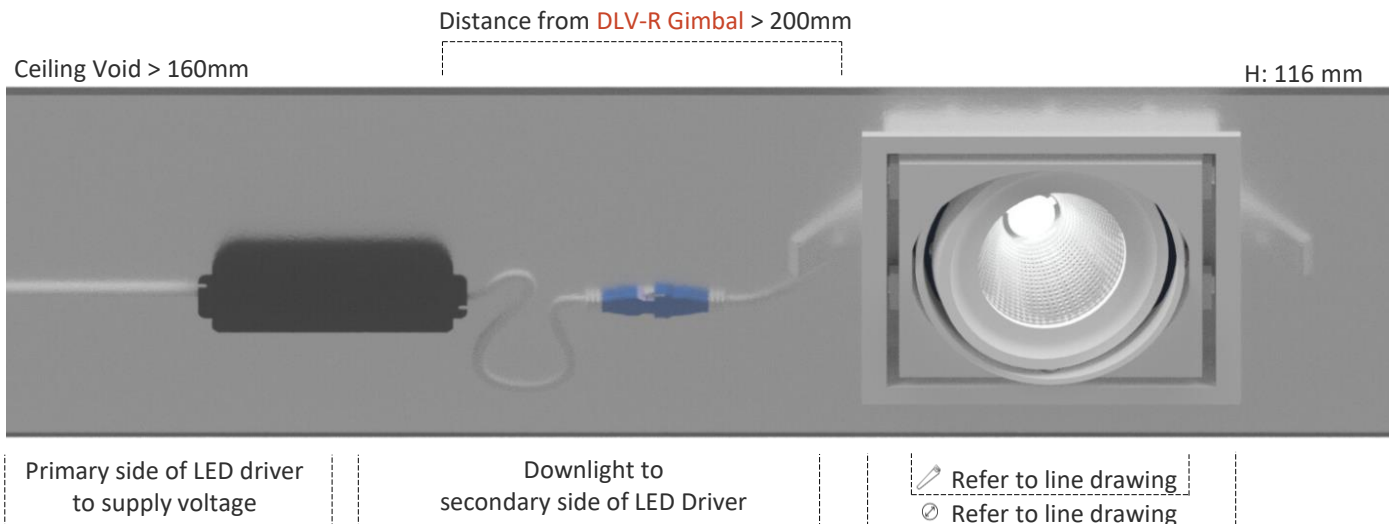


- Do not cover luminaire or electronic components with ceiling insulation material as this may cause (1) premature failure (2) a fire hazard.
- Luminaires require LED control gear to operate – connecting directly to mains will result in destruction of LED module.
- Use suitable LED control gear to operate the LED module parameters (see DLV-R Gimbal technical data sheet) – LED control gear must be of the strain relief type for safety reasons.
- Ensure all electrical connections are tight with no loose strands, including factory made connections.
- Installation of the luminaire must be carried out in accordance with the latest relevant wiring regulations for specific country/region.
- Mains must be switched off during the installation of the luminaire.
- These products supports **Circular Economy** and LED components can be replaced at end of life without damage or destruction of the luminaire.
- For more information, Visit www.luminairedesigncompany.com
- Get in touch by email contact@luminairedesigncompany.com

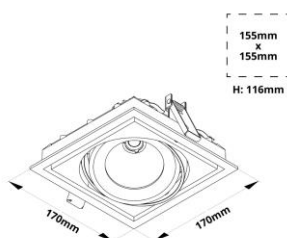

Single Configuration

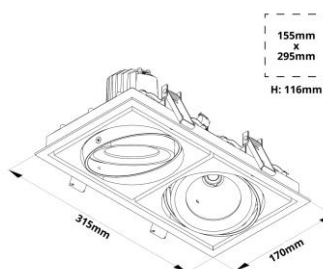

Double Configuration

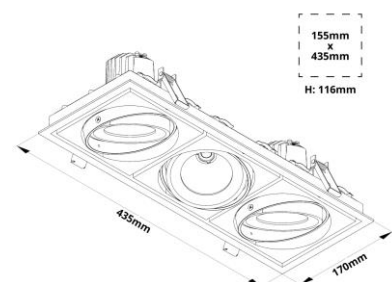

Triple Configuration